

HARDWARE INSTALLATION

If the system will use only a single global indicator, attach the LED to the two pins of the global activity/cache write-pending connector. The global fault pin pair connector is the overall fault signal. This signal will light up in any disk drive failure.

The following diagrams show all LEDs, connectors and pin locations.

Figure 2-13, ARC-1880ix-12/16/24 individual LED for each channel drive and global indicator connector for computer case.

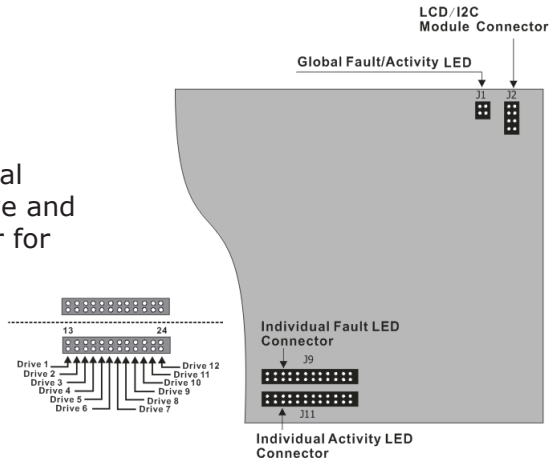


Figure 2-14, ARC-1880i individual LED for each channel drive and global indicator connector for computer case.

